


INSTALLATION INSTRUCTIONS



LED TRIMLESS SURFACE MOUNT 7"/9"/11"

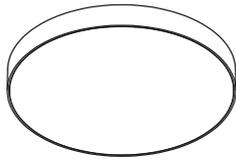

WARNING

FOR YOUR SAFETY READ AND UNDERSTAND INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION. BEFORE WIRING TO POWER SUPPLY, TURN OFF ELECTRICITY AT THE FUSE OR CIRCUIT BREAKER BOX.



CAUTION: RISK OF FIRE

SUPPLY CONDUCTORS (POWER WIRES) CONNECTING THE FIXTURE MUST BE RATED MINIMUM 90°C. IF UNCERTAIN, CONSULT AN ELECTRICIAN.



CAUTION: RISK OF ELECTRIC SHOCK


DISCONNECT POWER BEFORE OR CIRCUIT BREAKER BEFORE INSTALLING OR SERVICING.



SAFETY PRECAUTIONS

FOR SAFETY, READ AND UNDERSTAND INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION. ELECTRICITY SHOULD BE TURNED OFF AT THE FUSE OR THE CIRCUIT BREAKER BOX BEFORE INSTALLING THE FIXTURE. ALL ELECTRICAL CONNECTIONS MUST BE IN ACCORDANCE WITH N. E. C. OR YOUR LOCAL CODE.

PACKAGE CONTENTS

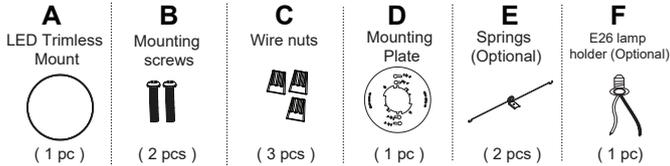


COMPATIBLE DIMMERS

LUTRON	LEVITON
<ul style="list-style-type: none"> • PD-6WCL • DVCL-153P • CTCL-153P • MACL-153M • TGCL-153P 	<ul style="list-style-type: none"> • 6681 • 6672

ASSEMBLY INSTRUCTIONS

1. PREPARING FOR INSTALLATION: DISCONNECT ELECTRICAL POWER BEFORE INSTALLING OR SERVICING ANY PART OF THIS FIXTURE.
2. THIS PRODUCT SHALL BE SURFACE MOUNTED WITH JUNCTION BOX OR NON-COMBUSTIBLE SURFACE ABOVE 4 FEET (1.2 METER) HIGH. USER SHOULD PREPARE NECESSARY ACCESSORIES AND SPARE PARTS (NOT PROVIDED) INCLUDING JUNCTION BOX AND SCREWS.


TOOLS REQUIRED

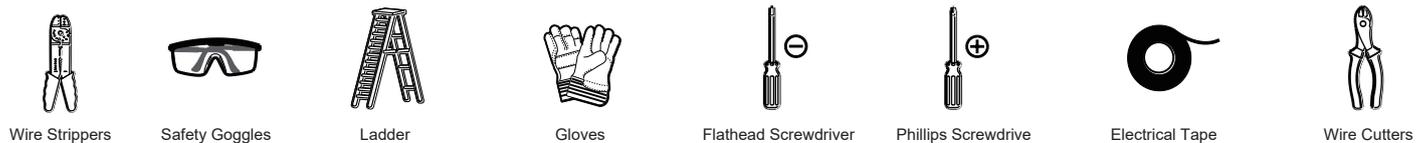


INSTALLATION (CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING)

INSTALLATION : OPTION 1 : FLUSH MOUNT


Step 1: Prior to installation, install mounting plate into electrical outlet box with mounting screws. Drive screws completely to the end of the junction box.

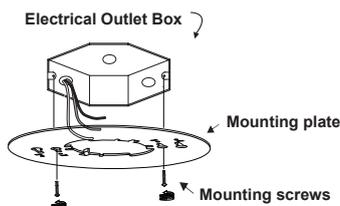

Step 2: Connect supply wires to wires on the fixture with wire nuts, or push wires into Quick Connector. Connect white to white, black to black, and copper wire to copper wire as grounding connection.

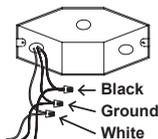

Step 3: Complete installation by pushing the fixture into the mounting plate

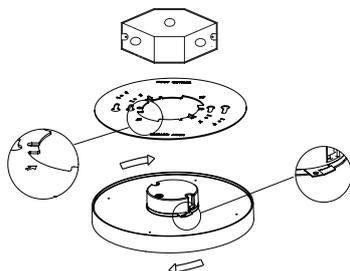


WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.




INSTALLATION : OPTION 2 : RETROFIT RECESSED CAN



Step 1: Insert wires into Quick Connector. Black to black and white to white. Attach ground wire to ground screw in recessed can.

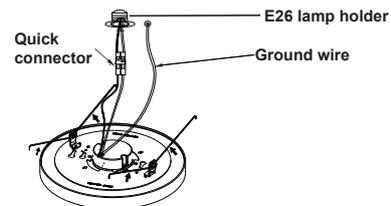

Step 2: Place E26 lamp holder into socket base.

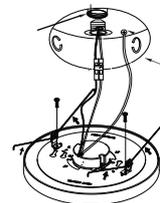

Step 3: Connect quick connectors and tuck all wires into recessed can. Squeeze springs and push up into recessed can.

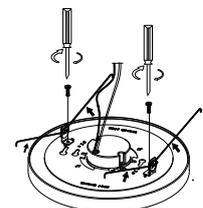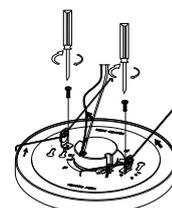

5 Inch Housing Position

6 Inch Housing Position