


ASSEMBLY INSTRUCTIONS

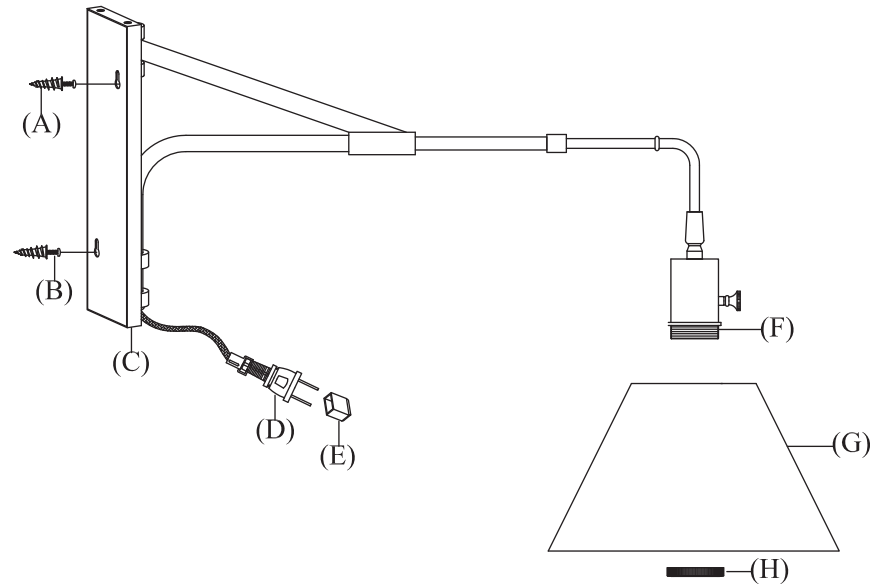

Brompton Extension Swing Arm

Item # RL2500

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the carton.
2. Hold the wall mounting plate up to the wall where you want to mount the sconce. Making sure the template is level, make small pilot holes through the paper and into the wall surface. Set the template aside.
3. If the sconce will be mounted to a wall stud, then the metal anchors (A) are not needed. Simply drill small holes at the previously marked points, and insert the mounting screws (B) using a screwdriver. Make sure 1/8" of threads are exposed.
4. If the sconce will be mounted to wallboard only, then the anchors (A) are needed. Using a screwdriver, drive the plastic anchors into the wallboard at the previously marked points. Insert mounting screws (B) into the anchors (A).
5. Hook lamp base (C) onto both heads of mounting screws (B).
6. Remove socket ring (H) from threaded socket (F).
7. Place lamp shade (G) over threaded socket and secure with socket ring (H).
8. Insert light bulb into socket.
9. Remove plastic cover (E) from electrical plug (D).
10. Plug lamp into wall outlet.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

RALPH LAUREN

